

MGF/TF Heater Knob Set – Installation Advisory

K840 / K841/ K851

Removal of the original plastic heater control knobs and replacement with machined alloy variants is a straightforward job and does not require disassembly and or removal of the console, heater unit and/or facias.

Process:

1. Take a piece of string approximately 0.5mtr in length. Slide under the skirt of the plastic factory heater knob
2. Wrap the string around the heater stem, one rotation should be sufficient.



3. Applying even pressure on both ends of the string pull the knob firmly away from the heater console. The knob should detach from the stem.
4. Note in most cases the spring steel knob retaining clip will remain on the heater control post. The clip is usually too far down the stem to extract easily so should be pushed further down the stem with a flat bladed screwdriver so as not to interfere with the installation of the alloy heater control knobs.



5. Line up the flat edge of the mortice at the rear of the alloy heater knob with the flat edge of the stem and slide the knob into place. The purpose of the grub screw is to provide engagement against the flat side of the heater control stem. A certain degree of adjustment if the grub screw is required to achieve sufficient engagement of the stem to retain the knobs in place.

