



Before you begin, we recommend marking the position of the relative position of the nut and threads protruding from the king pin, to reset the trunnion to its previous position, noting the scalloped king pin position to accommodate the top trunnion pin.

Remove thrust washer

Bearing Cup - Cup Down

Adjustment Shims

Thin Washer

Roller Bearing

Thick Washer

H002B

Top Trunnion Bearing Kit
MGB/C



MGOC SPARES &
ACCESSORIES