



H002B

Top Trunnion Bearing Kit MGB/C



Remove thrust washer

Bearing Cup - Cup Down

Adjustment Shims

Thin Washer

Roller Bearing

Thick Washer

When reassembling, tighten the nyloc nut until it seats fully, allowing for the trunnion to rotate freely without any detectable play. This adjustment is similar to setting wheel bearing preload on an MGB—there should be no free play, while allowing the assembly to rotate smoothly.