


Headlamp Stoneguard Fitting Instructions



1. Remove outer trim.

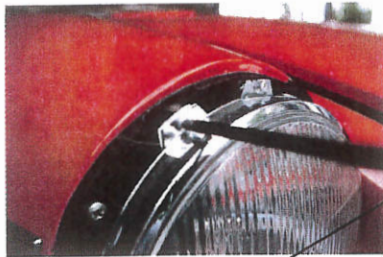

2. One at a time, remove fixing screw and attach stoneguard bracket as shown in Figure 4 below.


Replace screw and continue for all three brackets.



Figure 4.



3. Replace outer trim.

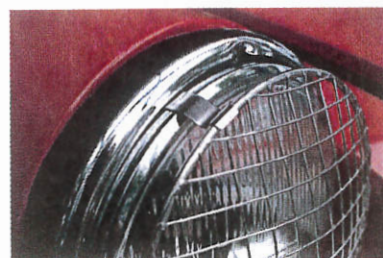

4. Attach stone guard as shown.