



MGF HOOD BACKLIGHT REPLACEMENT

Remove


1. Lower both windows.
2. Release hood catches, but do not lower hood.

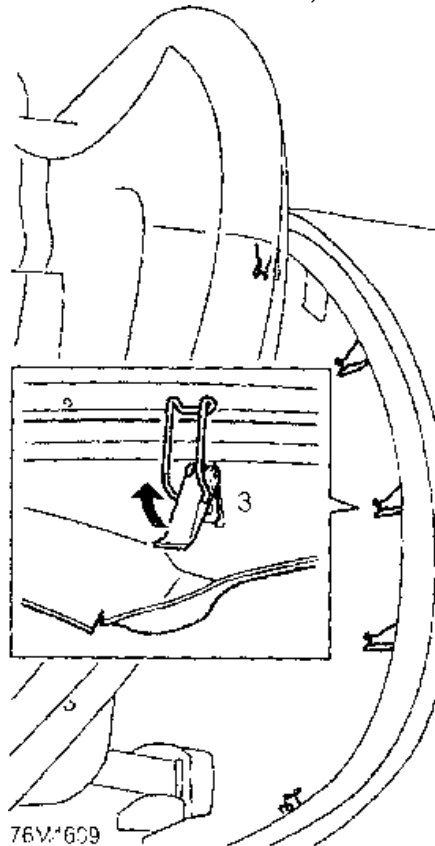

3. Release rear edge of hood well carpet and release 5 clips.
4. Fold rear of hood, up to release from body. CAUTION: Clips must be fully released to ensure that backlight is not damaged.
5. Unzip backlight.
6. Lay backlight flat in hood well.
7. Place protective covering over backlight and boot.

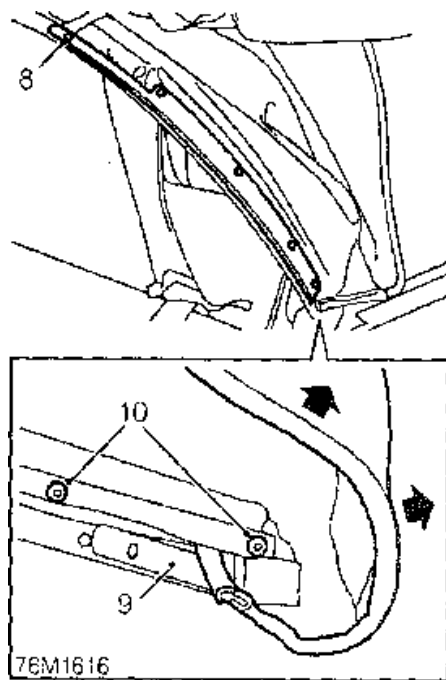

8. Remove 2 rivets securing ends of hood rear quarter retaining strips.
9. Carefully bend back ends of strips to reveal rivets.
10. Drill out 13 pop rivets securing backlight retaining strip.
11. Collect retaining strip and remove backlight.

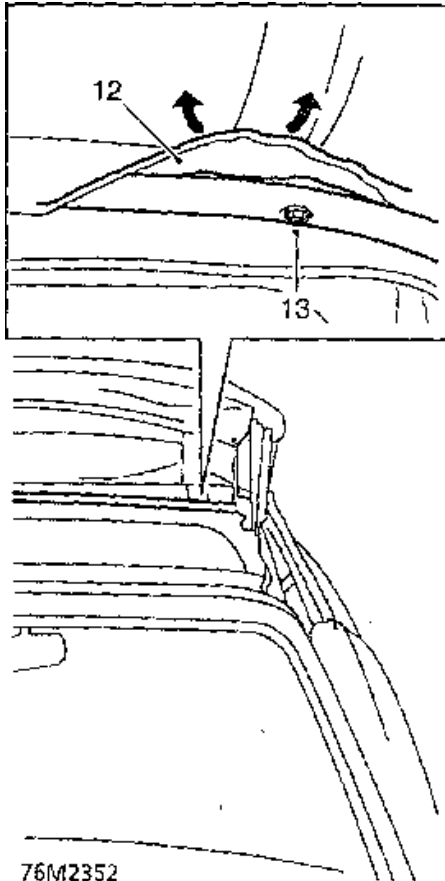

12. Release felt covering from 3rd hood bow.
13. Remove 7 nuts securing outer cover clamp rail.
14. Partially lower hood frame.
15. Release clamp rail studs from hood frame.
16. Lay protective sheet over backlight, luggage compartment lid and seats.
17. Release foam from ends of zip retainer to reveal pop rivets.
18. With assistance to hold outer cover aside, drill out 9 pop rivets securing zip retainer to hood frame.
19. Remove backlight zip.

Refit

1. Drill out any rivet heads still captive in hood frame.
CAUTION: Clear away swarf from protective covering to ensure that new backlight does not become scratched.
2. With assistance, position backlight to frame, centralise and transfer holes into backlight.
3. Position backlight to a soft covered work surface.
4. With careful use of a drill, enlarge holes to 3,5 mm.
5. Position backlight to frame, align retainer and secure with pop rivets.
NOTE: Start at the centre location and work outwards.
6. Secure ends of rear quarter retaining strips with rivets.
7. Position zip assembly to frame and secure with rivets.
8. Fit foam pads to both ends of hood bow.
NOTE: Foam pads are designed to prevent outer cover being damaged by ends of hood bow and zip retainer.
9. Position outer cover clamp rail to frame and engage studs.
10. Raise hood, but do not secure catches.
11. Secure outer cover, clamp rail with nuts.
12. Apply adhesive to 3rd hood bow and mating surface of felt covering.
CAUTION: Ensure underside of outer cover does not become contaminated with adhesive.
13. Bond felt covering to 3rd bow, ensuring that slots are correctly positioned around frame straps.
14. Remove protective covering.
15. Raise backlight into position and secure with zip.
16. Engage clips to secure rear of hood to body.
17. Engage hoodwell carpet beneath flip seal.
18. Secure hood catches.
19. Raise windows.

